

NINJA®

Mega Kitchen System

BL770NZ

OWNER'S GUIDE



IMPORTANT SAFETY INSTRUCTIONS

For Household Use Only

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS BEFORE USING YOUR NINJA® PROFESSIONAL BLENDER.

IMPORTANT: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

WARNING: **TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:**

1. To protect against electrical shock, do not submerge the appliance or allow the power cord to come into contact with water or any other liquid.
2. **DO NOT** allow young children to operate the appliance or use as a toy. Close supervision is necessary when any appliance is used by or near children.
3. Never leave an appliance unattended when in use.
4. Turn the appliance Off and remove the power cord from the electrical outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the electrical outlet. Never pull from the power cord.
5. **DO NOT** abuse the power cord. Never carry the appliance by the power cord or yank it to disconnect from electrical outlet; instead grasp the plug and pull to disconnect.
6. **DO NOT** operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water. To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard. Incorrect re-assembly or repair can cause a risk of electrical shock or injury to persons when the appliance is used.
7. **DO NOT** let the power cord hang over the edge of table or counter or touch hot surfaces such as the stove.

8. Always use appliance on a dry, level surface.
 9. Keep hands, hair, clothing, as well as utensils out of container while blending to reduce the risk of severe injury to persons or damage to the appliance. A scraper may be used but only when the appliance is not running.
 10. **CAUTION:** Blade assembly is sharp, handle with care. When handling the blade assembly, always hold by the shaft.
 11. Avoid contact with moving parts.
 12. **DO NOT attempt to sharpen blades.**
 13. **DO NOT** use the appliance if blade assembly is bent or damaged.
 14. To reduce risk of injury, never place the blade assembly on base without pitcher or bowl properly attached.
 15. **DO NOT** operate this appliance on or near any hot surfaces (such as gas or electric burner or in a heated oven).
 16. The use of attachments or accessories including canning jars, not recommended by the manufacturer may result in fire, electric shock or personal injury.
 17. **DO NOT** remove the container from the motor base while the appliance is in operation.
 18. To reduce the risk of injury, **NEVER** operate the appliance without the lid in place; **DO NOT** try to defeat the interlock mechanism; make sure that the attachment is properly installed before operating the appliance.
 19. **DO NOT** expose containers to extreme temperature changes.
 20. **CAUTION: DO NOT BLEND HOT LIQUIDS.**
 21. **DO NOT** overfill.
 22. Extreme caution must be used when moving an appliance containing hot food, water or other liquids.
 23. **DO NOT** operate the appliance empty.
 24. To reduce the risk of burns, always allow the appliance to cool before taking off parts and before cleaning.
 25. Max ON time is 30 seconds under 1500W load. If the appliance overheats, a thermal switch will become activated and shut off the motor. To reset, unplug the appliance and let it cool down for approximately 15 minutes before using again.
 26. In the event that the unit overloads, the control panel lights will flash and the unit will shut down. Unplug the unit and wait 15 minutes to reset.
 27. **THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.** Do not use this appliance for anything other than its intended use. Do not use outdoors.
 28. The maximum rating is based on the 6-Blade Assembly (pitcher) that drives the greatest power and other recommended attachments may draw significantly less power or current.
- ⚠ WARNING:** Extension cords are not recommended for use with this product.

SAVE THESE INSTRUCTIONS

Contents

Thank you for
purchasing the
Ninja® Mega
Kitchen System.

Getting to Know Your Ninja® Mega Kitchen System.....	5
Using the Ninja® Mega Kitchen System	7
Assembly and Use for the 2.15 L Pitcher.....	8
Assembly and Use for the Single Serve Cup.....	10
Assembly and Use for the 1.89 L Bowl	11
Speed Setting & Uses.....	13
Care & Maintenance	14
Troubleshooting Guide.....	15
Warranty	18

THIS BOOK COVERS MODEL NUMBERS:

BL770NZ 30

TECHNICAL SPECIFICATIONS

Voltage: 220-240V., 50/60Hz.

 
Power: 1500 Watts

Max ON time is 30 seconds under 1500W load


Pitcher Capacity: 2.15 L

Bowl Capacity: 1.89 L

Single Serve Capacity: 0.473 L

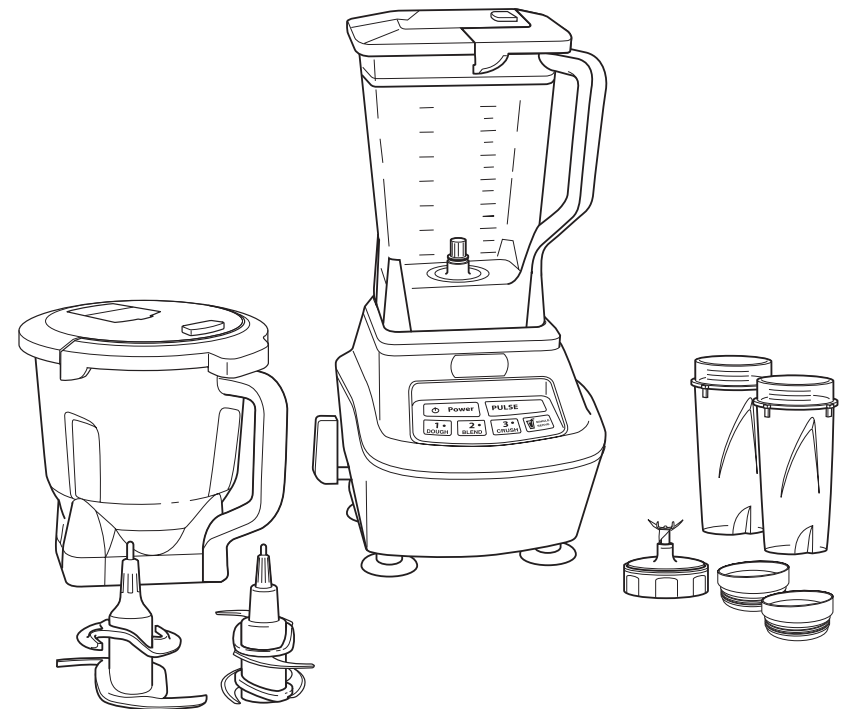

 Getting To Know Your Ninja® Mega Kitchen System

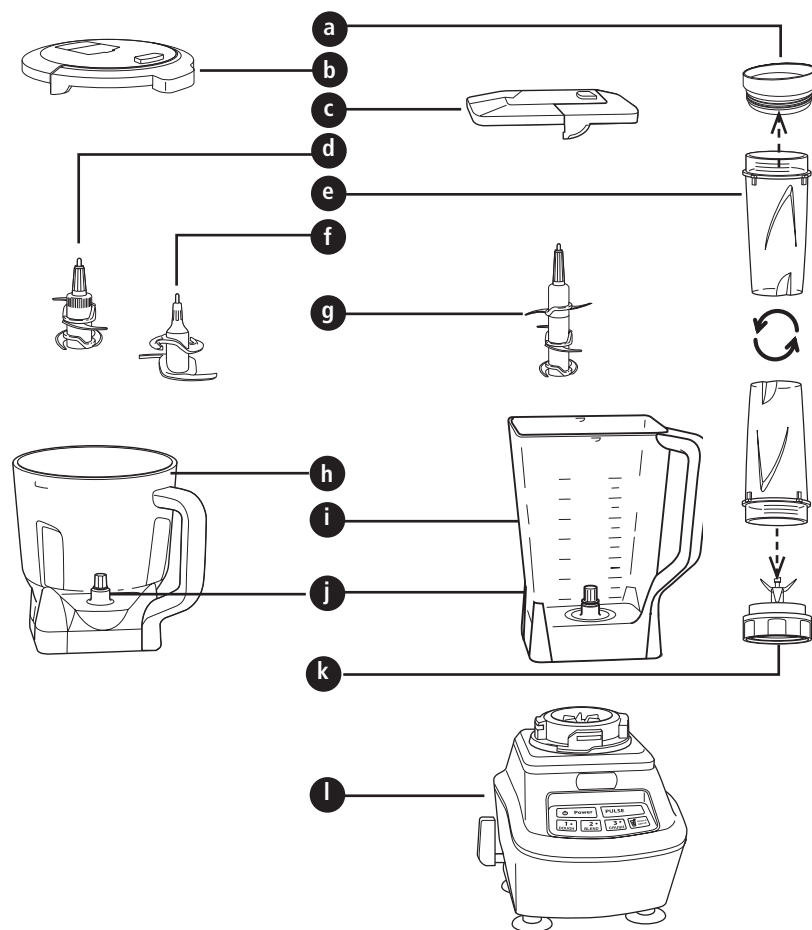


- a To-Go Single Serve Lid (x2)
- b Bowl Lid with Locking Handle
- c Pitcher Lid with Locking Handle
- d 4-Blade Assembly (bowl)
- e Single Serve Drink Cup (x2)
- f Dough Blade (bowl)
- g 6-Blade Assembly (pitcher)

- h 1.89 L Bowl
- i 2.15 L Pitcher
- j Gear Shaft
- k Single Serve Blade
- l Motor Base
- m Power Cord (not shown)

NOTE: Attachments are **not** interchangeable.

 The Ninja® Mega Kitchen System is a professional, high powered innovative tool with a sleek design and outstanding performance, a true asset to any kitchen. It is perfect for ice crushing, blending, food mixing, and complete juicing. The Ninja® Mega Kitchen System also features a unique capability to knead dough for pizzas, breads, pretzels and cookies! Create all of your favourite recipes fast and easy with just one touch of a button. For best results, be sure to carefully read all the instructions contained in the manual before using this appliance.

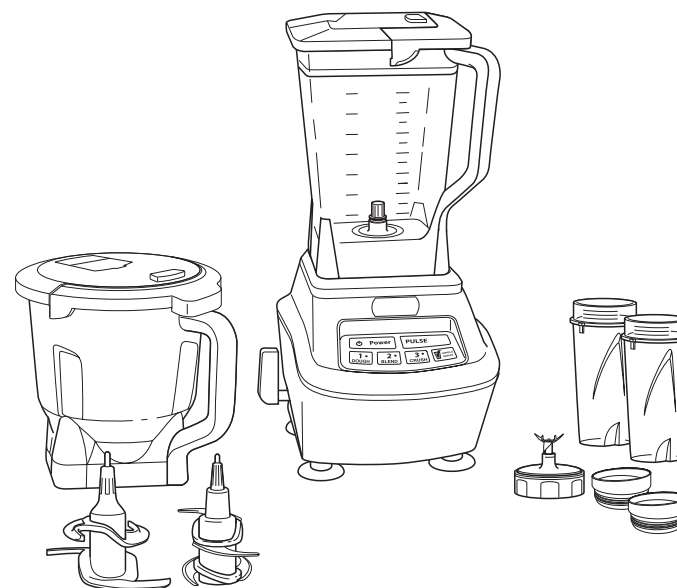

FEATURES:

- Patented Pitcher
- 1.89 L Bowl with Drizzle Hole
- Single Serve Drink Cup
- Lock-In Lid, Featuring Pour Spout
- Easy to Clean Electronic Control Panel
- Sturdy, Non-Slip Base
- Hidden Drain Holes - prevent water build up from dishwasher

PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE APPLIANCE:

- ⚠ **IMPORTANT:** Never add ingredients into the container before placing the attachment in first.
- ⚠ **IMPORTANT:** Attachments are **not** interchangeable.
- ⚠ **CAUTION:** Blades are sharp! Use extreme caution when handling the blade assemblies. Always hold them by the shaft.
- ⚠ **IMPORTANT:** **DO NOT** attempt to operate the appliance without the lid on.
- ⚠ **IMPORTANT:** Never run the appliance empty.
- ⚠ **CAUTION:** Use extreme caution when blending hot foods to avoid accidental scalding or burns. Do not blend food that is hotter than 82°C. Allow very hot ingredients to cool before blending.
- ⚠ **WARNING:** Secure the appliance while in use by pressing down on the lid with one hand.
- ⚠ **CAUTION:** Never remove the container while the appliance is still running.
- ⚠ **WARNING:** Never leave the appliance unattended while in use.

BEFORE FIRST USE

- 1 Remove all packaging material and labels from the appliance.
- 2 Wash the lids, pitcher, bowl, single serve cups and attachments in warm, soapy water with a soft cloth. **Use caution when washing the blade assemblies as the blades are very sharp.**
- 3 Rinse and dry thoroughly.
- 4 The pitcher, bowl, single serve cups, lids and attachments, are all dishwasher safe. It is recommended that the lids and attachments be placed on the top rack. Ensure that the attachments are removed from the containers before placing in the dishwasher.
- 5 Wipe the motor base clean with a damp cloth.

Assembly and Use for the 2.15 L Pitcher

Assembly

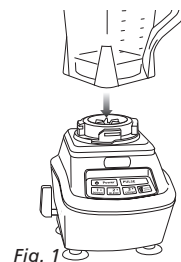 


Fig. 1

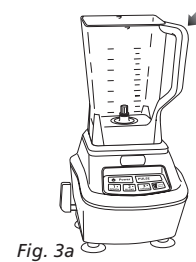 


Fig. 3a



Fig. 2



Fig. 3b

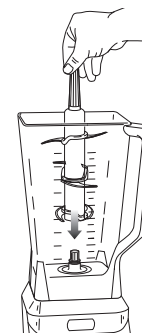 


Fig. 4

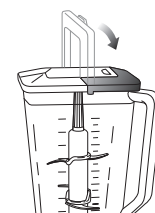 


Fig. 5

- ⚠ **IMPORTANT:** Make sure that the motor base is plugged in for use.

- 1 Place the motor base on a clean, dry, level surface such as a counter or table top.
- 2 Align and lower the Pitcher onto the motor base. (Fig. 1) Handle should be aligned slightly to the right of the "LOCK" symbol on the motor base.
- 3 Rotate the pitcher clockwise as far as it will go to lock in place. (Fig. 2)
- 4 The pitcher can be placed on the motor base two ways; the handle can be on the front right corner or the front left corner. (Fig. 3a, Fig. 3b)
- 5 Holding the 6-Blade Assembly by the top of the shaft, place it onto the drive gear inside the pitcher. Ensure that the attachment is seated properly and is standing upright. (Fig. 4)
NOTE: The blade will fit loosely on the drive gear.

- 6 Add the ingredients to the pitcher, making sure not to overfill.

- ⚠ **NOTE:** Do not exceed the highest measured marking line on the side of the pitcher.
- ⚠ **NOTE:** If you need to add additional ingredients while the appliance is blending, open the pour spout cap and pour the ingredients in through the opening.
- 7 Plug the power cord into the electrical outlet and press the power button (⏻).
NOTE: As a safety feature, the power button (⏻) will flash and the motor will not work if the pitcher and lid are not installed correctly. When the pitcher and lid are installed properly, the power button (⏻) will be solid, indicating that the appliance is ready for use.
- 8 Holding the lid by the handle in the upright position, place it on top of the pitcher aligning the arrow (↗) located on the lid with the arrow (↖) located on the pitcher's handle. (Fig. 5) Press the handle down until you hear a click.

USE

REMOVAL

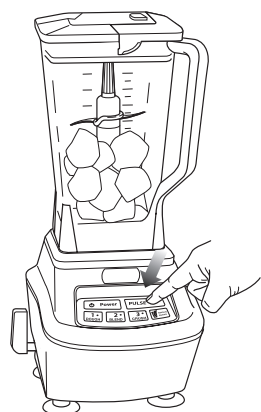 


Fig. 6

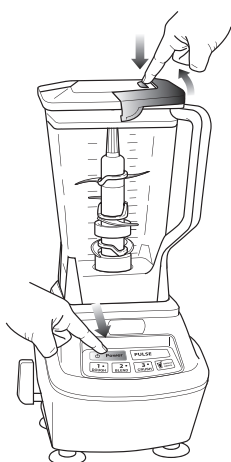 


Fig. 7

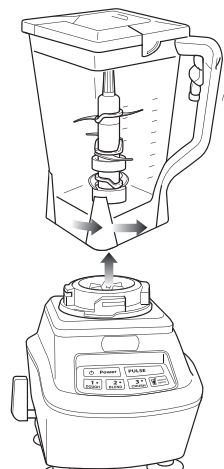 


Fig. 8

- 9 Select the speed that best suits your needs. (Fig. 6)

NOTE: Pulse ingredients for even blending by pressing down in short intervals.

- 10 When you have reached your desired consistency, stop the appliance by pressing the power button (⏻) and wait for the attachment to stop turning. (Fig. 7)

- 11 To remove the lid, press the release button on the lid, pull the lid handle up to a 90° angle and lift the lid off. Turn the pitcher counter clockwise and then lift off the base. (Fig. 7, Fig. 8)

CAUTION: Never insert your hands in the pitcher as the blades are sharp. Always use a spatula to dislodge food that has stuck to the sides of the pitcher.

- 12 Depending on the consistency of the contents in the container, open the pour spout cap and use the spout to empty liquid contents. For thicker consistencies, remove the lid and attachment carefully (by its shaft), then empty contents from the container.

- 13 Make sure that the unit is unplugged when not in use.

ASSEMBLY

USE

REMOVAL

 


Fig. 1

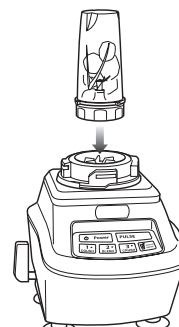 


Fig. 2

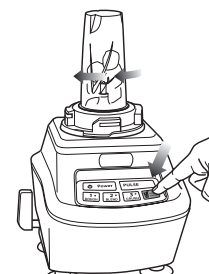 


Fig. 3



Fig. 4

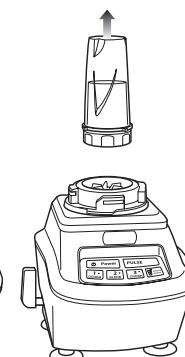 


Fig. 5

For best results, use short "PULSES"... Practice makes perfect!!

IMPORTANT: Make sure that the motor base is plugged in for use.

- 1 Place the motor base on a clean, dry, level surface such as a counter or table top.
- 2 Add ingredients to the single serve cup.
- 3 Place the single serve blade onto the cup and screw it tightly until you have a good seal. (Fig. 1)
- 4 Turn the single serve cup upside down and place it onto the motor base, aligning the tabs on the cup with the motor base. Turn the single serve cup clockwise. (Fig. 2) Turn the power button on, the single serve button will illuminate.
- 5 Press down on the Single Serve button in short intervals to activate. (Fig. 3)

- 6 Once you have reached your desired consistency, turn the power button off. Turn the single serve cup counter clockwise and pull straight up to remove. (Fig. 4) (Fig. 5)

NOTE: Do not overfill! To avoid spilling, do not add ingredients past the "Max" fill line.

- 7 Turn the cup upright and remove the single serve blade by twisting the blade assembly clockwise.
- 8 Place the To-Go drinking lid onto the single serve drink cup, twist to seal and enjoy!
- 9 Make sure that the motor base is unplugged when not in use.

Assembly and Use for the 1.89 L Bowl

ASSEMBLY

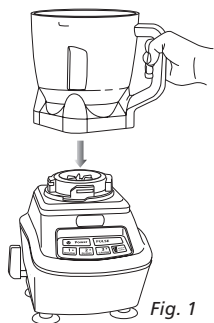 


Fig. 1



Fig. 3a

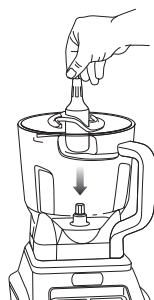 


Fig. 4

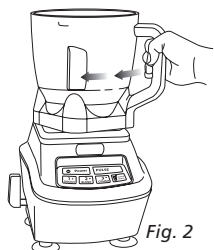 


Fig. 2



Fig. 3b

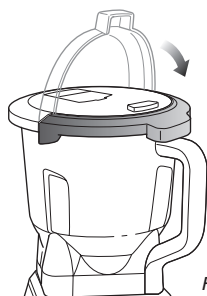 


Fig. 5

IMPORTANT: Make sure that the motor base is plugged in for use.

- 1 Place the motor base on a clean, dry, level surface such as a counter or table top.
 - 2 Align and lower the Bowl onto the motor base. (Fig. 1) Handle should be aligned slightly to the right of the "LOCK" symbol on the motor base.
 - 3 Rotate the bowl clockwise as far as it will go to lock in place. (Fig. 2)
 - 4 The bowl can be placed on the motor base two ways; the handle can be on the front right corner or the front left corner. (Fig. 3a, Fig. 3b)
 - 5 Holding the desired blade by the top of the shaft, place it onto the drive gear inside the bowl. Ensure that the attachment is seated properly and is standing upright. (Fig. 4)
- NOTE:** The blade will fit loosely on the drive gear.
- 6 Add the ingredients to the bowl, making sure that they do not exceed the highest measured marking line on the side of the bowl.

- 7 Plug the power cord into the electrical outlet and press the power button (⏻).
NOTE: As a safety feature, the power button (⏻) will flash and the motor will not work if the bowl and lid are not installed correctly. When the bowl and lid are installed properly, the power button (⏻) will be solid, indicating that the appliance is ready for use.

- 8 Holding the lid by the handle in the upright position, place it on top of the bowl aligning the arrow (▼) located on the lid with the arrow (▲) located on the bowl's handle. (Fig. 5) Press the handle down until you hear a click.

NOTE: The 1.89 L bowl is not intended for blending drinks. Do not overfill.

NOTE: To add liquids during blending, open the drizzle hole on the top of the lid and pour the liquid slowly into the mixture.

NOTE: Do not exceed the highest measured marking line on the side of the bowl. For meats do not exceed 1.0L bowl mark.



USE

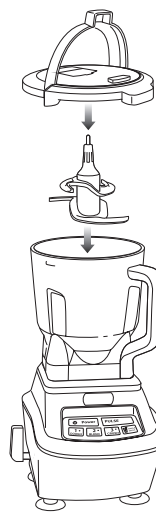 


Fig. 1

REMOVAL

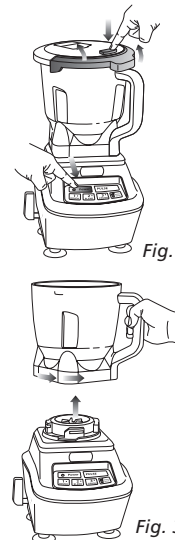 


Fig. 2

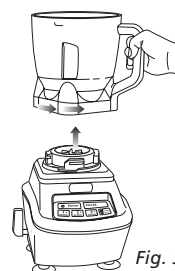 


Fig. 3

USE

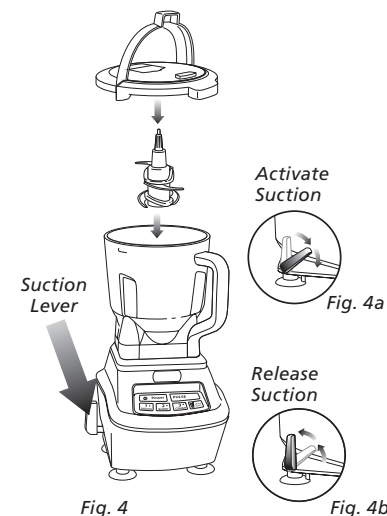 


Fig. 4

Fig. 4a

Fig. 4b

USING THE 4-BLADE ASSEMBLY

- 1 Holding the 4-Blade assembly by the shaft, place it onto the gear shaft inside the bowl. Ensure that the attachment fits around the gear shaft and that it is standing straight.
 - 2 Add the ingredients and secure the bowl lid onto the bowl. (Fig. 1)
 - 3 Plug the power cord into the electrical outlet and press on the power button (⏻).
 - 4 Select the speed that best suits your needs. Pulse ingredients evenly by pressing down in short intervals.
- NOTE:** Please refer to "Speed Settings & Uses" chart for suggested uses and speeds.
- 5 When you have reached your desired consistency, stop the appliance by pressing the power button (⏻) and wait for the blade to stop turning.
 - 6 To remove the lid, pull the lid handle up to a 90° angle and lift the lid off. Turn the bowl counter clockwise and then lift off the base. (Fig. 2, Fig. 3)
- NOTE:** Do not exceed the highest measured marking. For meats, do not exceed 1.0L marking.

USING THE DOUGH BLADE

- IMPORTANT:** Use only the "DOUGH" button when using this attachment.
- IMPORTANT:** Use the suction lever when using the dough blade on SPEED 1/DOUGH.
- 1 Place the motor base on a clean, dry, level surface such as a counter or table top. (Fig. 4) Push the suction lever on the side of the motor base down to secure the suction feet to the surface. (Fig. 4a) If the suction feet have not totally adhered to the surface, press down lightly on the base to give the suction feet a better grip.
 - 2 Secure the bowl onto the motor base.
 - 3 Holding the dough blade by the shaft, place it onto the gear shaft inside the bowl. Ensure that the attachment fits around the gear shaft and that it is standing straight.
 - 4 Add the ingredients and secure the bowl lid onto the bowl.
- NOTE:** For best results add wet ingredients first and then add dry ingredients.
- 5 Plug the power cord into the electrical outlet and press on the power button (⏻).
 - 6 Once finished making dough, remove the bowl from the motor base. (Fig. 2, Fig. 3)
 - 7 To release the motor base from the counter or table top, pull the suction lever up to release the suction feet. (Fig. 4b)
- NOTE:** The suction lever activates the suction feet for added stability.

Speed Setting & Uses

FUNCTION	CONTAINER	ATTACHMENT	SPEED BUTTON	TYPE OF FOOD
Single Serve Blending	Single Serve Cup	Single Serve Blade	Single Serve	Smoothies Frappes Milk Shakes
Mincing	Single Serve Cup	Single Serve Blade	Single Serve	Onion Garlic Herbs
Kneading	Bowl	Dough Blade	1	Bread dough Pie dough Pizza dough Pretzel dough
Dough Mixing	Bowl	Dough Blade	1	Cookie dough
Blending	Pitcher/Bowl Single Serve Cup	Blade Assembly Single Serve Blade	2 Pulse Single Serve	Pâtés Stewed fruits Dips Apple sauce Spreads Soups Baby food
Emulsifying	Bowl	Blade Assembly	2	Salad Dressings Dips Sauces
Grinding	Bowl	Blade Assembly	2	Meat
Grating	Bowl Single Serve Cup	Blade Assembly Single Serve Blade	3 or Pulse Single Serve	Grated cheese Bread crumbs Spices
Fine Blending	Bowl Single Serve Cup Pitcher	Blade Assembly Single Serve Blade	Pulse Single Serve 3	Salsa Vegetables Nuts
Mixing	Bowl	Dough Blade	1	Light cake mixes Batters
Ice Crushing	Pitcher Single Serve Cup	Blade Assembly Single Serve Blade	3 Single Serve	Ice
Pureeing	Pitcher Single Serve Cup	Blade Assembly Single Serve Blade	3 Single Serve	Smoothies Smooth soups Milkshakes

⚠ IMPORTANT: Use the suction lever when using the dough blade on SPEED 1/DOUGH.

Care & Maintenance

HOW TO CLEAN

⚠ CAUTION: Make sure that the motor base is unplugged from the power source before inserting or removing any attachment and before cleaning.

⚠ CAUTION: DO NOT immerse the motor base into water or any other liquid.

- 1 Separate/remove all parts from each other.
- 2 Clean the motor base with a damp cloth and wipe dry.
- 3 Place the pitcher, single serve cup and bowl in the dishwasher. Place the lids and attachments on the top rack. **Use caution when handling the blade assemblies as the blades are very sharp.**

NOTE: You may also wash the containers by filling $\frac{3}{4}$ of the container with warm water and a drop of dish washing detergent, placing the corresponding lid on the container and pressing the pulse button a few times. Once clean, remove the container from the motor base. Rinse the container, attachment and lid under running water. Allow all the parts to dry before storing.

HOW TO STORE

- 1 Store the Ninja® Mega Kitchen System upright with the pitcher on the motor base, 6-Blade assembly inside the pitcher and lid on the pitcher. Do not place anything on top. Store the bowl with the 4-Blade assembly inside and the lid on top. Store the single serve cup and the rest of the attachments along side the appliance or in a cabinet where they will not be damaged and won't cause a hazard.

RESETTING THE MOTOR THERMOSTAT

The Ninja® Mega Kitchen System features a unique safety system which prevents damage to the unit's motor and drive system should you inadvertently overload your appliance. If the appliance is being overloaded, the motor will stop and the power light will remain lit and speeds 1, 2 and 3 will flash. To reset the appliance, follow the resetting procedure below:

- 1 Unplug the appliance from the electrical outlet.
- 2 Remove and empty the container and ensure that no food is jamming the cutting blades or attachments.
- 3 Allow the appliance to cool for approximately 30 minutes.
- 4 Re-install the container onto the base and re-plug the appliance into the electrical outlet.
- 5 Proceed to use the appliance as before making sure not to exceed the recommended maximum capacities.

Troubleshooting Guide

Notes

PROBLEMS	POSSIBLE REASONS & SOLUTIONS
Motor Doesn't Start or Attachment Doesn't Rotate.	<p>Make sure the container is securely placed on motor base.</p> <p>Make sure the lid is securely on container in the correct position (align arrows).</p> <p>The appliance is turned "Off". Press the power button (⏻) to turn "On".</p> <p>Check that the plug is securely inserted into the electrical outlet.</p> <p>Check the fuse or circuit breaker.</p> <p>The unit has overloaded. The appliance will stop and the power light will remain on while speeds 1, 2 and 3 will flash. Unplug and wait approximately 30 minutes before using again.</p> <p>The unit has overheated. Unplug and wait approximately 30 minutes before using again.</p> <p>Check to make sure the unit is not overloaded.</p>
Food is Unevenly Blended.	<p>Either you are blending too much food at one time, or the pieces are not of even size and blending smaller amounts per batch.</p>
Food is Blended Too Fine or is Too Watery.	<p>The food has been over blended. Use pulse button for controlled blending.</p>
Food Collects On Lid or On the Sides of the Container.	<p>The mixture is too thick. Add more liquid.</p>
You Cannot Achieve Snow From Solid Ice.	<p>Do not use ice that has been sitting out or has started to melt. Use ice straight from the freezer.</p>
Motor Base Won't Stick to Counter or Table Top.	<p>Make sure surface and suction feet are wiped clean. Suction feet will only stick to smooth surfaces. Suction feet WILL NOT stick on some surfaces such as, wood, tile and non-polished finishes.</p> <p>DO NOT attempt to use appliance when the motor base is stuck to a surface that is not secure, (cutting board, platter, plates, etc.).</p>

[illegible]

If your product becomes defective due to faulty material or workmanship within a period of 1 year from the date of purchase, we warrant to do the following:

- **For New Zealand Consumers:** We will replace the product with a new product, free of charge, or repair the product at our cost, at our discretion.
- **For Australian Consumers:** Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

- **DO NOT** operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water. To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, **it must be replaced by a qualified electrician in order to avoid a hazard.** Incorrect re-assembly or repair can cause a risk of electrical shock or injury to persons when the appliance is used.
- The product has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The product has been subjected to fair wear and tear.
- The product has not been used for trade, professional or hire purposes.
- The product has not sustained damage through foreign objects, substances or accident.

- Components that are subject to natural wear and tear caused by normal use in accordance with operating instructions.
- Unauthorised/improper maintenance/handling or overload is excluded from this warranty.
- For guarantee claims you will need to submit a proof of purchase in the form of a valid receipt that displays date and place of purchase.

This warranty does not apply to accessories supplied with the product.

Replacement products will be covered by the limited warranty for the balance of the warranty period from the date of the original purchase.

Only defective product or parts returned to place of purchase will be replaced under this warranty.

Brand Developers Limited
Unit H, 686 Rosebank Road,
Avondale 1026, Auckland, New Zealand
FAX: +64 9 306 8203
NZ Customer Care 0800 002 999

Brand Developers Aust Pty Ltd
461 Plummer Street,
PORT MELBOURNE, VIC 3207
FAX: +61 3 9681 7825
AUST Customer Care: 1800 890 840

Distributed by:

Brand Developers Aust Pty Ltd

461 Plummer Street

PORT MELBOURNE, VIC 3207

FAX: +61 3 9681 7825

AUST Customer Care: 1800 890 840



Brand Developers Ltd

Unit H, 686 Rosebank Road,

Avondale, 1026 Auckland,

NEW ZEALAND

FAX: +64 9 306 8203

NZ Customer Care: 0800 002 999



Copyright © 2013 Euro-Pro Operating LLC

Printed in China

Illustrations may differ from actual product.

BL770NZ 30.E.130607.1

Euro-Pro and **Ninja** are trademarks of Euro-Pro Operating LLC.



Z854

